

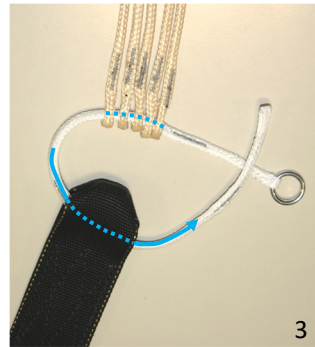
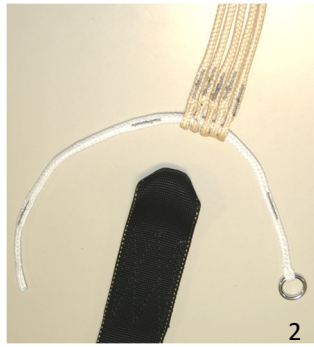
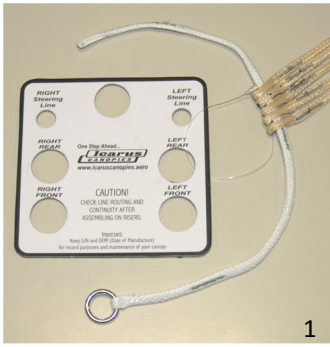
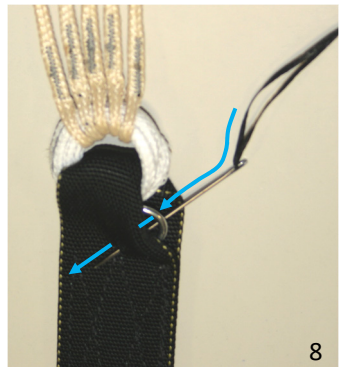


Soft Link Installation Instructions

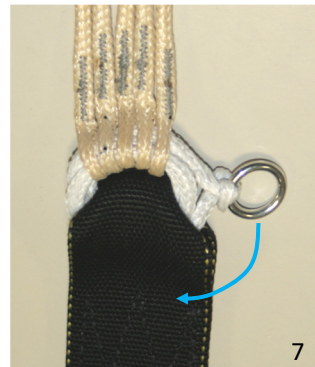





- 1 To keep the correct order of the lines during the installation of the soft link, pass the soft link through the lines without removing the plastic.
- 2 Once soft link is completely through line group, remove the plastic.

- 3 Pass the soft link through the riser completing the first loop.
- 4 Then, pass the soft link through the line group and riser a second, third and fourth time to complete the fourth loop.

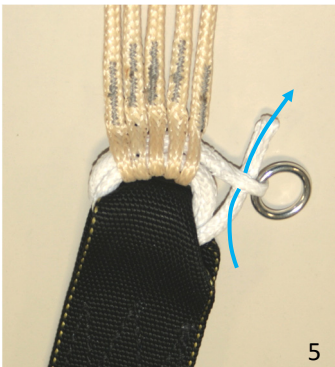

- 5 Pass the loop end of the soft link through the opening under the ring.
- 6 Insert the ring through the loop end of the soft link and pull tight.

- 7 Pull on lines and riser simultaneously to even the length of the 4 link passes, and place the ring inside the riser.
- 8 Sew one hand tack passing through the ring and attaching only one side of the riser. *Use Lite Super Tack Cord.

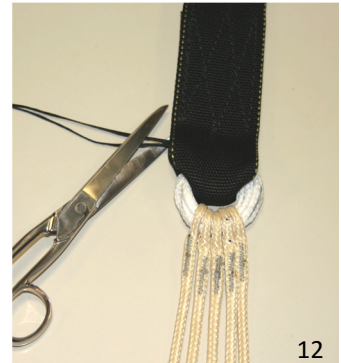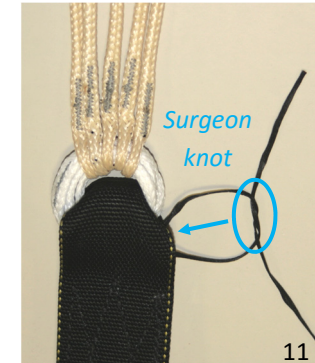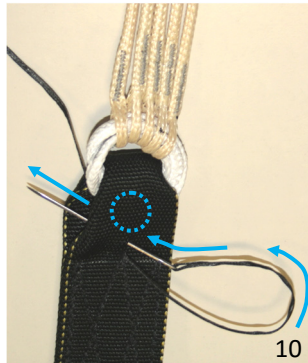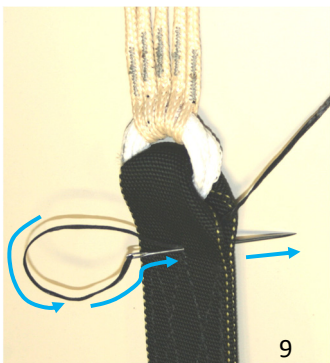

- 9 Pass the needle back through the two layers of the riser, without passing through the ring.
- 10 Pass the needle back, one last time, through one side of the riser only and in front of the stitch made in point 8.

- 11 Tie a surgeon knot inside of the riser.
- 12 Finally, cut ends of thread, making sure they are not too close to the knots, and check correct assembly.



Soft Link Installation Instructions

Tandem canopies only
(Main & Reserve)

www.icaruscanopies.aero
Icarus Canopies Support—USA
sales.usa@icaruscanopies.aero
Icarus Canopies Support—EU
support.eu@icaruscanopies.aero

LOT # _____

OTEC870028 Rev. 02