

# MIRAGE CUTAWAY HANDLE REPLACEMENT INSTRUCTIONS

Please have your rigger replace your cutaway handle according to the following instructions.

The cutaway handle originally delivered with your Mirage had the cable length trimmed specifically for your rig. The overall length of the cable varies with the size of the container and the harness size.

**TOOLS NEEDED:** dry cloth, dry lubricant, lighter, ruler, side cutters.

Before installing your new cutaway handle, ensure the cables are clean using a dry cloth and silicon spray/dry lubricant.

To trim your new cutaway cables, feed them through the housings, place the cutaway handle in its pocket and mate the Velcro. Ensure all housings are in their resting position, i.e. there is no tension on the housing or cable.

There should be a finished minimum of 5.5” up to a maximum of 7” of cable past the cable housing end (start measuring where the cable comes out of the cable housing end). Trim accordingly. *As of Nov. 1 1998 Mirage Systems trims to 6”. For RSL installed rigs, its 6.25” RSL side and 5.75” non RSL side.*

Finish the ends of the cable to cover any rough edges by heating the plastic with a lighter and then using your fingers to roll the plastic coating over the end of the cable.

Should you have any questions, please do not hesitate to contact Mirage Systems.

For additional questions, please contact our technical department at [tech@miragesys.com](mailto:tech@miragesys.com) or by phone at 386-740-9222.