


# SMART

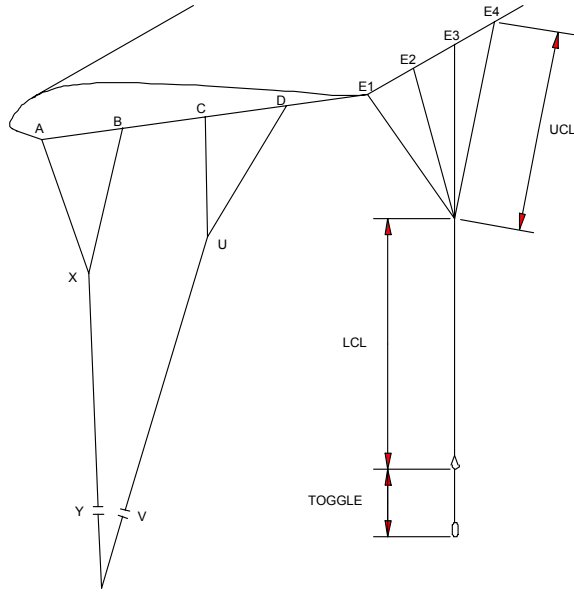


	A	B	C	D	E	
1						1
2						2
3						3
4						4
5						
6						
7						
8						


UCL

LCL

TOGGLE



ENSURE LOOPS ARE HELD EVENLY AND SECURELY. EACH LINE TO BE LOADED TO 4.5KG DURING MEASUREMENT.  
MEASURE THE DEPLOYMENT BRAKE SETTING WITH THE TOGGLES STOWED.  
MEASURE THE FULL FLIGHT SETTING WITH THE TOGGLES UNSTOWED.

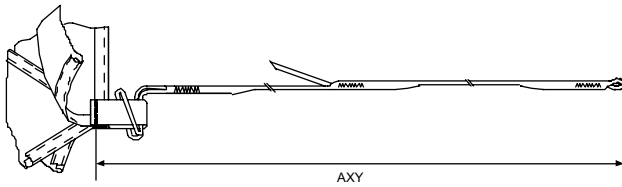

MEASURE FROM END OF SUSPENSION LINE LOOP TO BARTACK ON SUSPENSION LINE ATTACHMENT TAB.

Canopy	99	110	120	135	150	160	175	190	220	250
AXY	2410	2510	2608	2772	2924	3002	3150	3278	3522	3720
A-B	35	39	40	40	45	45	45	50	50	93
A-C	180	184	200	215	235	235	235	253	270	282
A-D	395	403	435	455	490	501	515	538	580	568
LCL	1900	1970	2050	2170	2275	2335	2465	2535	2730	2180
TOGGLE	310	312	338	362	392	397	427	442	432	807
E4-E1	0	0	0	0	0	0	0	0	0	0
E4-E2	0	0	0	0	0	0	0	0	0	0
E4-E3	0	0	0	0	0	0	0	0	0	0
Deployment Brake Setting										
E4-C4	EVEN	EVEN	EVEN	EVEN	EVEN	EVEN	EVEN	EVEN	EVEN	EVEN
Full Flight Setting										
E4-D4	100	113	118	136	145	155	160	160	130	530

All dimensions in mm

REV 0.0