
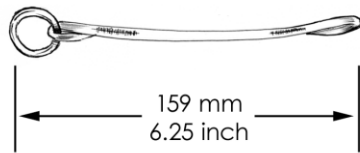


Soft link for Main canopies
PN: P 1487-00

Soft link for Reserve canopies
PN: P 1487-01

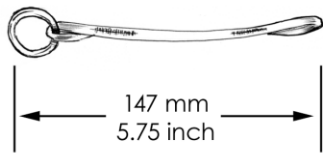

aerodyne


SOFT LINK INSTALLATION MANUAL

FLYAERODYNE.COM

©Aerodyne Research, LLC

1405 Flight Line Blvd. Unit 20 Deland , FL 32724 U.S.A.
Tel. +1.813.891.6300 Fax. +1.813.891.6315

Installation procedure on front and rear Reserve and Main risers:

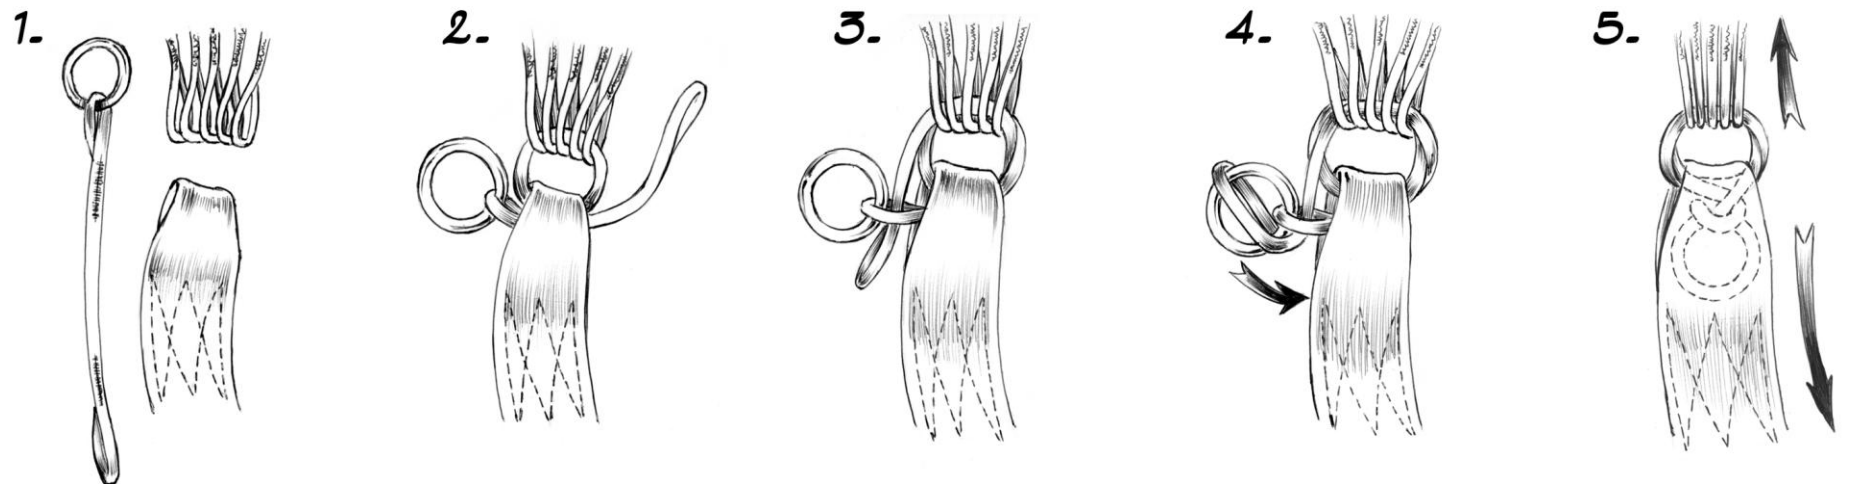

Secure the Soft Link in the webbing pocket, and hand tack as shown:

