




Performance Designs, Inc.  
1300 E. International Spdwy. Blvd.  
DeLand, FL 32724  
386-738-2224

## Measuring Sliders On a PD Canopy

# FLAT SLIDER

Pull the slider taut from side to side across the center and measure from one side to the other side across the center.

Pull the slider taut from front to rear across the center and measure from front to rear across the center.

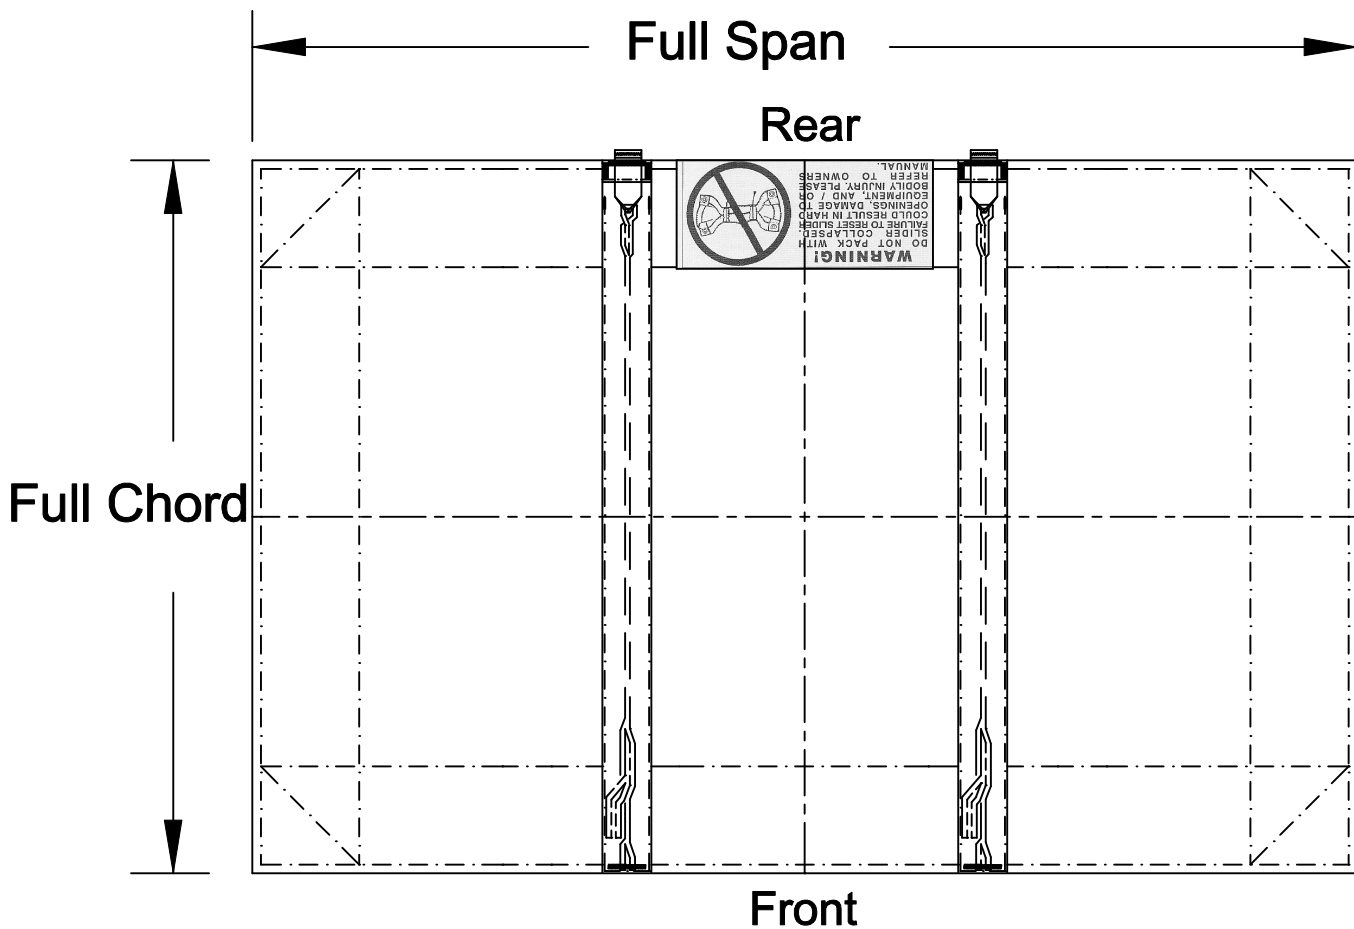

Bottom View