

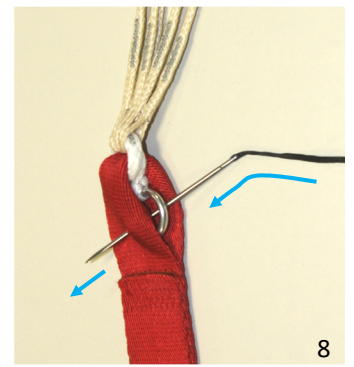
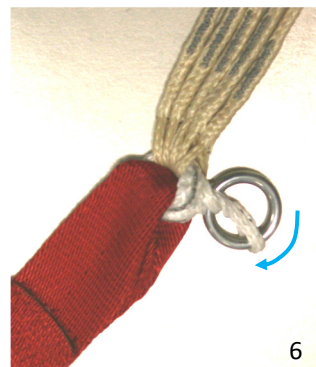
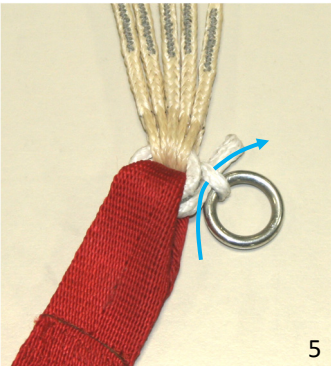
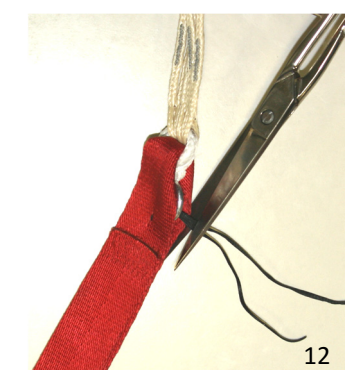
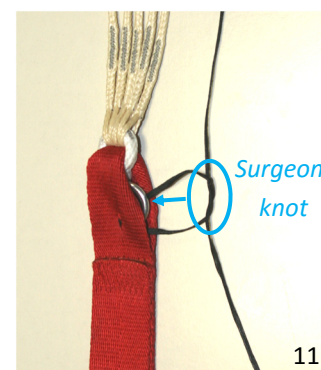


- 1 To keep the correct order of the lines during the installation of the soft link, pass the soft link through the lines without removing the plastic.
- 2 Once soft link is completely through line group, remove the plastic.
- 3 Pass the soft link through the riser completing the first loop.
- 4 Then, pass the soft link through the line group and riser a second time to complete the second loop.

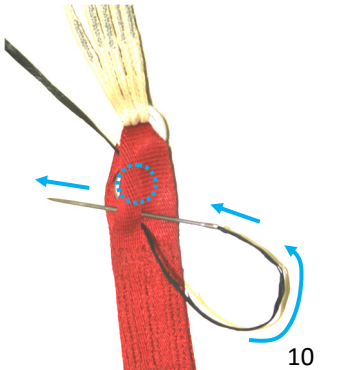

- 5 Pass the loop end of the soft link through the opening under the ring.
- 6 Insert the ring through the loop end of the soft link and pull tight.
- 7 Pull on lines and riser simultaneously to even the length of the 2 link passes, and place the ring inside the riser.
- 8 Sew one hand tack passing through the ring and attaching only one side of the riser. *Use Lite Super Tack Cord.

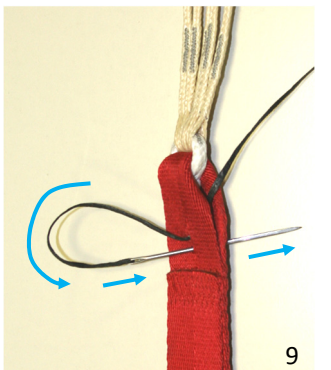

- 9 Pass the needle back through the two layers of the riser, without passing through the ring.
- 10 Pass the needle back, one last time, through one side of the riser only and in front of the stitch made in point 8.
- 11 Tie a surgeon knot inside of the riser.
- 12 Finally, cut ends of thread, making sure they are not too close to the knots, and check correct assembly.



Soft Link Installation Instructions

Sport Main Canopies, 1" risers

Not for Reserve use

www.icaruscanopies.aero

Icarus Canopies Support—USA

sales.usa@icaruscanopies.aero

Icarus Canopies Support—EU

support.eu@icaruscanopies.aero

LOT # _____

OTEC870027 Rev. 01