



www.icarusworld.net

ICARUS World Support
support@icarusworld.net

S/N

DOM _____ / _____ (MM/YY)

(Date of Manufacture)

Final Measurements (cm)

OUTSIDE	A1	486,1
	A2	487,1
	A3	487,3
	A4	487,4
CENTER	A5	487,5

OUTSIDE	B1	476,9
	B2	494,3
	B3	494,5
	B4	494,5
CENTER	B5	494,6


OUTSIDE	C1	473,2
	C2	512,5
	C3	513,8
	C4	514,3
CENTER	C5	514,8

OUTSIDE	D1	476,5
	D2	538,5
	D3	541,8
	D4	543,0
CENTER	D5	544,2

		Standard (6&2)
[X] UPPER STEERING LINES	1	145,2
	2	145,2
	3	169,8
	4	155,6
	5	146,1
	6	146,1
	7	155,6
	8	169,8
[Y] LOWER STEERING LINE		424,8
[Z] LOWER STEERING LINE		442,8

CANOPY	TX2
SIZE	350

Double Command Standard (6 & 2)

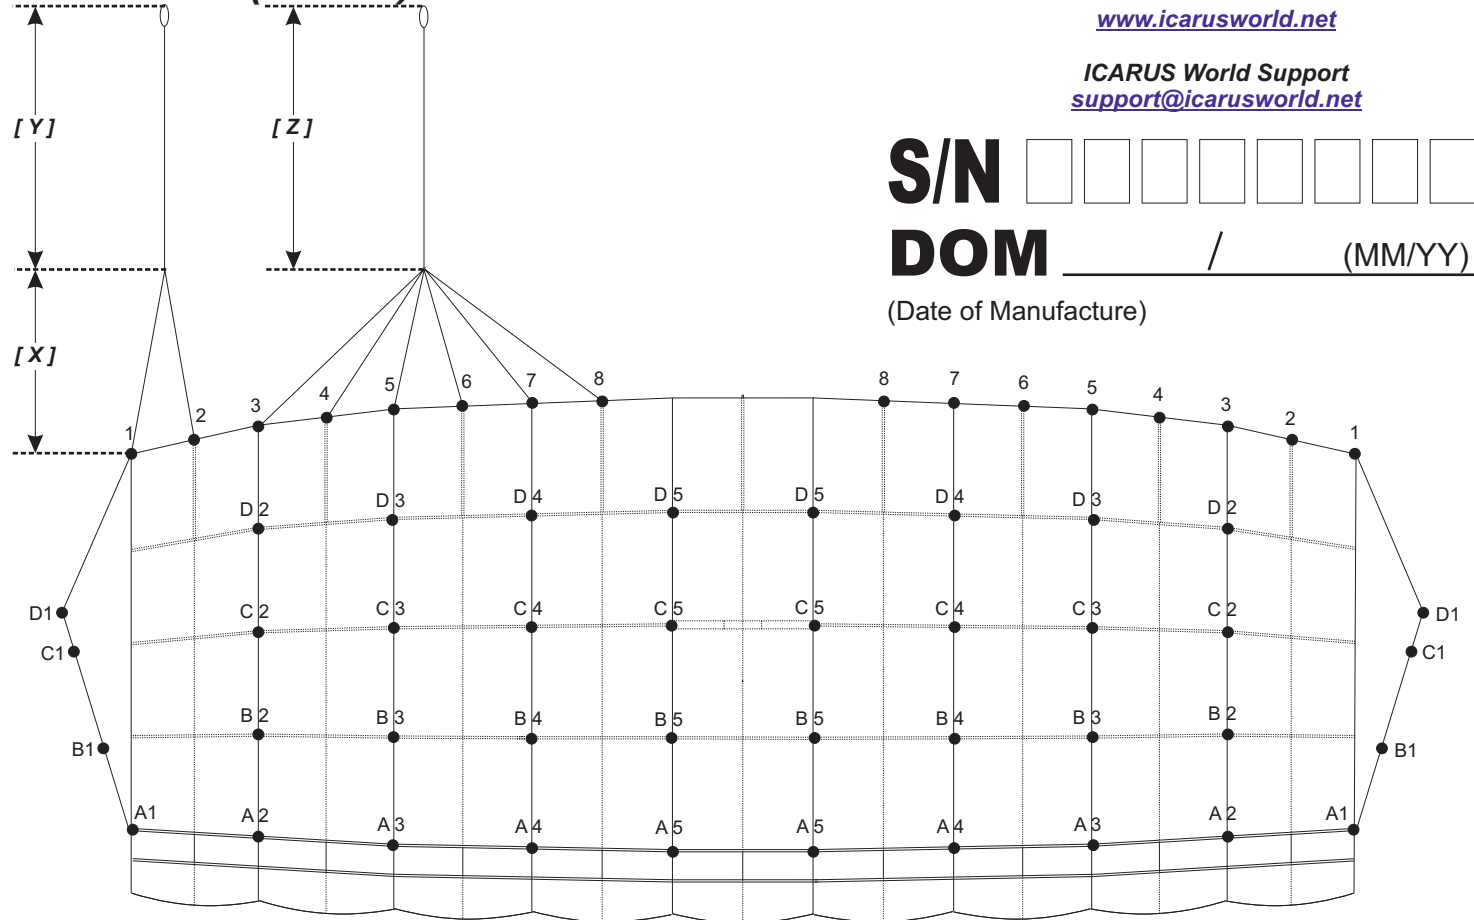

WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.



www.icarusworld.net

ICARUS World Support
support@icarusworld.net

S/N

DOM _____ / _____ (MM/YY)

(Date of Manufacture)

Final Measurements (cm)

OUTSIDE	A1	486,1
	A2	487,1
	A3	487,3
	A4	487,4
CENTER	A5	487,5

OUTSIDE	B1	476,9
	B2	494,3
	B3	494,5
	B4	494,5
CENTER	B5	494,6


OUTSIDE	C1	473,2
	C2	512,5
	C3	513,8
	C4	514,3
CENTER	C5	514,8

OUTSIDE	D1	476,5
	D2	538,5
	D3	541,8
	D4	543,0
CENTER	D5	544,2

		Single Brake Line
[X] UPPER STEERING LINES	1	169,8
	2	155,6
	3	146,1
	4	-
	5	146,1
	6	155,6
	7	169,8
	8	-
[Y] LOWER STEERING LINE		442,8

CANOPY	TX2
SIZE	350

Single Brake Line

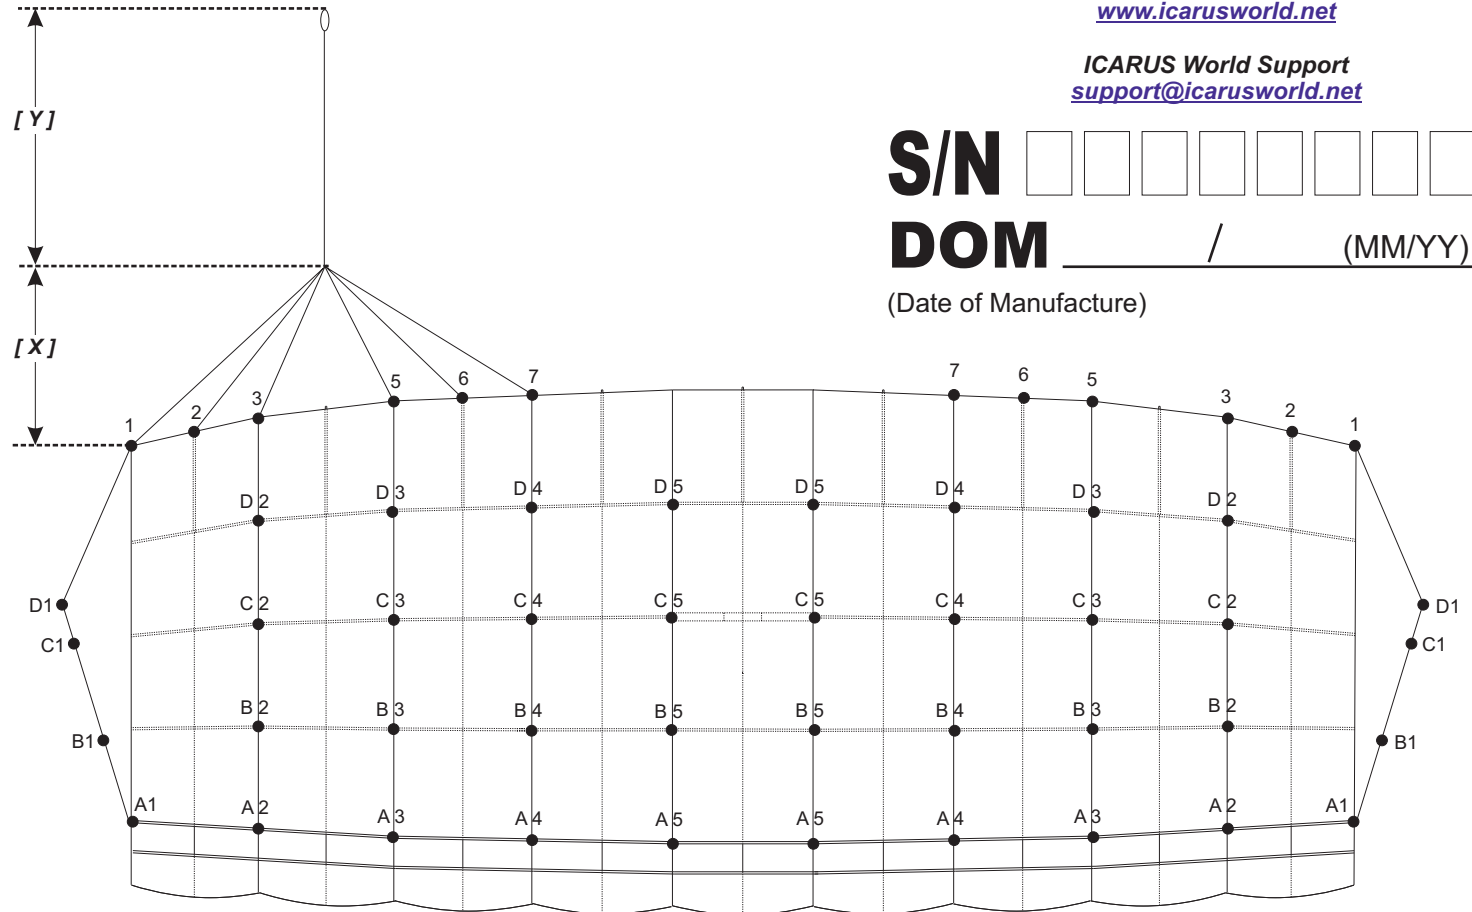

WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.