

A.A.D.



Vigil® Cuatro User's Manual
US v2021.05

Vigil® Cuatro is developed, produced & tested in our factory, that is ISO 9001 certified.

Vigil® Cuatro “Single Cutter Unit”

NATO Stock Number (NSN) 1377-13-121-8661

Vigil® Cuatro “Dual-pin Cutter Unit”

NATO Stock Number (NSN) 1377-13-121-3937



Please carefully read and ensure that you fully understand this user's manual before any use of the Vigil® Cuatro.

YOU MUST ALSO READ, FULLY UNDERSTAND AND AGREE TO THE TERMS OF THE DISCLAIMER AND LIMITED WARRANTY PRIOR TO USING THE **VIGIL® Cuatro**. IF YOU DO NOT FULLY UNDERSTAND AND AGREE TO ALL OF THE TERMS OF THE DISCLAIMER AND LIMITED WARRANTY, YOU MUST NOT USE THE **VIGIL® Cuatro**. YOU MAY RETURN IT, IN ITS ORIGINAL PACKAGING, FOR A FULL REFUND.

YOUR USE OF THE **VIGIL® Cuatro** IN THE EQUIPMENT YOU USE FOR MAKING A PARACHUTE JUMP IS CONCLUSIVE PROOF THAT YOU AGREE TO ALL OF THE TERMS OF THE DISCLAIMER AND LIMITED WARRANTY. (see page 39 to 41)

The Vigil is endorsed by:



SUN PATH
PRODUCTS, INC.



parachutesystems



Jump Shack



nv/sa

Advanced Aerospace Designs

AAD nv/sa - Advanced Aerospace Designs

Bld A. Reyers 193 • B-1030 Brussels • Belgium
Tel: +32 (0)2 732 65 52 • Fax: +32 (0)2 736 06 27
info@vigil.aero • www.vigil.aero

Vigil America Inc.

1400 Flightline Blvd. Suite C
DeLand, FL 32724 USA
Tel: +(1)386 736 8464 • Fax: +(1)386 736 8468
candace@vigilamerica.com • www.vigil.aero

Table of contents

Paragraph	Page
Warning + Disclaimer and limited warranty (see page 39-41).....	4
1 Welcome to the Vigil® Cuatro World!	5
2 Introduction	7
3 Function	8
3.1 General Working Principle	8
3.2 Installation	10
3.3 The Four Activation Modes	10
3.3.1 "PRO" Mode	10
3.3.2 "STUDENT" Mode	10
3.3.3 "TANDEM" Mode	10
3.3.4 "XTREME" Mode	11
3.4 Information regarding the Activation Altitude	12
3.5 Start Up and Shut Down Procedures	14
3.5.1 Start Up – Display	14
3.5.2 Starting Up the Vigil® Cuatro	15
3.5.3 Self Tests	15
3.5.4 «INFO» Menu (Information)	17
3.5.5 «SETUP» Menu (Parameters) - Altitude correction	18
3.5.6 Using a positive altitude correction to raise the activation altitude.....	19
3.5.7 «CONFIG» Menu (Configuration)	21
3.5.8 Choice confirmation	22
3.5.9 Shut Down	23

Paragraph	Page
4 Flight Restriction for the Pilot - Airborne	24
4.1 Recommendations	26
5 Vigil® Cuatro Components	26
5.1 Main Box	27
5.2 Dual Battery Pack	27
5.3 Pulses Plus Element	28
5.4 Electronic Unit	28
5.5 Cutter Unit	29
5.6 Control Unit	30
6 Waterproof - IP68	31
7 Replacement of Parts of the Vigil® Cuatro	32
7.1 Replacing the Battery Pack	32
7.2 Replacing the Cutter or Control Unit	32
7.3 Spare Part Card	34
7.4 RMA (return merchandise authorization)	34
8 Technical Specifications	36
8.1 Glossary	36
8.2 Dimensions	37
8.3 Operating Description	37
8.4 Units and conversion factors	37
9 Communication Port – IR Download Box	38
10 Service life limit of Vigil® Cuatro units	39
11 Disclaimer and limited warranty	39
12 Road Map / Graficet (Parameter Sequence Flow Chart)	43

WARNING

SKYDIVING IS A DANGEROUS ACTIVITY AND YOU RISK MINOR OR SERIOUS PERMANENT INJURY OR DEATH EACH TIME YOU SKYDIVE. THE CORRECT USE OF THE **VIGIL® AAD** MAY REDUCE THIS RISK, HOWEVER, THERE ARE SITUATIONS IN WHICH A **VIGIL® AAD** MAY NOT REDUCE AND MAY ACTUALLY INCREASE THE RISK. THE **VIGIL®** IS A BACKUP DEVICE, WHICH MAY OR MAY NOT SAVE YOUR LIFE AND IT IS IMPORTANT TO NEVER RELY ON THE **VIGIL®** AS A LIFESAVING DEVICE. PRIOR TO USING THE **VIGIL®**, IT IS IMPORTANT TO READ THE **VIGIL® Cuatro USER'S MANUAL** VERY CAREFULLY. ALWAYS OBSERVE ALL WARNINGS, AND FOLLOW ALL MANUFACTURER'S INSTRUCTIONS, RECOMMENDATIONS AND SAFETY PROCEDURES. ALWAYS FOLLOW CORRECT OPENING PROCEDURES AND, IF NECESSARY, EMERGENCY PROCEDURES. NEVER SKYDIVE UNLESS YOU ARE FULLY TRAINED AND COMPETENT IN THE USE OF ALL OF YOUR EQUIPMENT, INCLUDING **VIGIL®**.

The **Vigil® Cuatro** is equipped with an integrated Piezo resistive barometric pressure sensor. Do not expose your **Vigil® Cuatro** to pressures above 3000 hPa, (45.5 psi), or to temperatures above 158°F or 70°C. The battery pack is designed to operate within a temperature range from -13°F to +158°F or -25°C to +70°C.

DISCLAIMER AND LIMITED WARRANTY see § 10 & 11.

- ▶ You must switch ON your **Vigil® Cuatro** ONLY at the take-off zone (reference altitude or ground zero)
- ▶ If you intend to change to a different take off zone, **YOU NEED TO SWITCH OFF YOUR VIGIL® CUATRO BEFORE TRAVELLING**, and switch it back ON at the new take off zone, before take-off.
- ▶ Before each jump it is essential to visually check your LCD screen to ensure its functionality, its activation mode ("PRO", "STUDENT", "TANDEM" or "XTREME") and its pre-selected parameters (altitude correction in feet or in meters) are correctly set.

 **NEVER JUMP WITH A BLANK SCREEN!!!**

1. Welcome to the Vigil® Cuatro World!

We congratulate you on your purchase of today's most sophisticated and modern, multimode Automatic Activation Device. It is a revolutionary safety device, with no imposed maintenance schedule. The **Vigil® Cuatro** will automatically check all of its functional features each time it is switched on. The **Vigil® Cuatro** will detect any anomalies by itself. Should an abnormality be found, the controller will display an error message (see § 3.5.3.), and the **Vigil® Cuatro** unit will not switch on. In this case, the **Vigil® Cuatro** needs to be analyzed by an authorized dealer, or sent back to the factory for analysis.

The **Vigil® Cuatro** is designed for a life expectancy of maximum 20 years from the date of manufacture. The above life expectancy is based on the fact that the cutter, the Pulses Plus element and the electronic components have been designed for a functional lifespan of 20 years.

The **Vigil® Cuatro** is very user friendly. It can be used in your choice of 4 activation modes: "PRO", "STUDENT", "TANDEM" or "X TREME". The **Vigil® Cuatro**, an ALL-IN-ONE Automatic Activation Device (AAD) is designed to work in U.S. or Metric standards units.


When traveling on any commercial flight with your the **Vigil® Cuatro**, this manual as well as the **Vigil® X-Ray Card** should accompany you. It contains explanations that will be useful to the airport security staff.

The most recent manual is available on the Vigil website at www.vigil.aero on the download page.



The **Vigil® Cuatro** is, in principle, a last resort safety device, which may or may not save your life. It has never been intended to be, and is not to be used as, a parachute's primary opening system. The procedures written in this manual must be followed to ensure that the **Vigil® Cuatro** functions properly. Incorrect setup or use can lead to improper functioning of the **Vigil® Cuatro**. A skydiver should always adhere to all rules and regulations set by his/her country's skydiving federation. The use of a **Vigil® Cuatro AAD** does not exempt the parachutist from performing proper emergency procedures.

ALTHOUGH VIGIL®s HAVE SAVED MANY LIVES, NEVER RELY ON THE VIGIL® TO SAVE YOUR LIFE, IT MAY NOT DO SO IN SOME SITUATIONS.

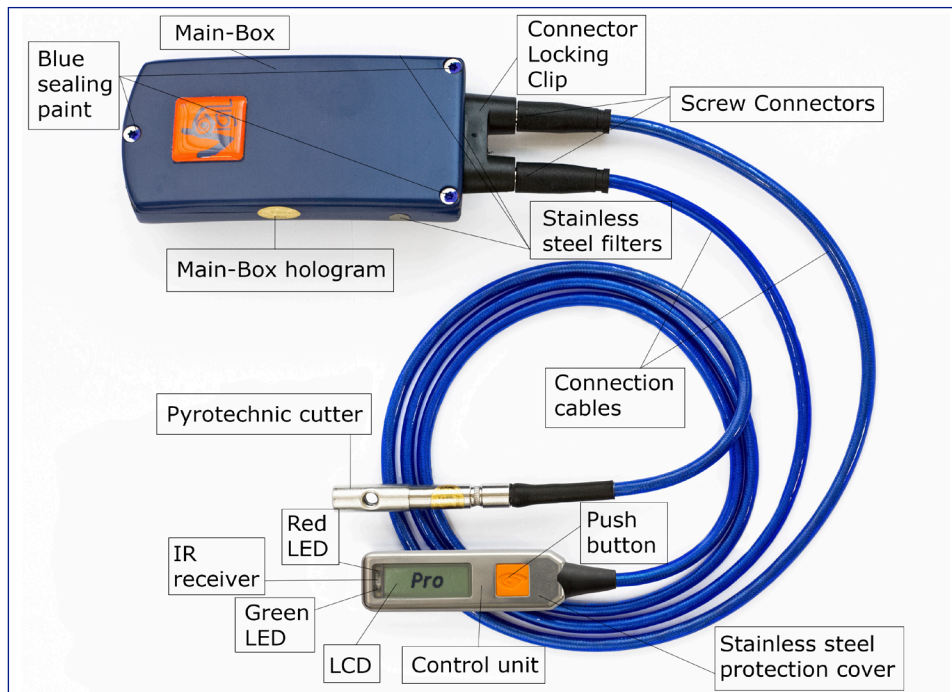

2. Introduction

Your **Vigil® Cuatro** was designed and developed by a professional team of engineers and skydivers. Its function is to cut the reserve closing loop in the event that you reach a freefall speed at an unsafe altitude. The flat metal alloy mainbox is exceptionally strong; its ergonomic design fits easily into most current rigs.

A **Vigil® Cuatro** installation kit (pouch, controller window and cutter retainer) can be supplied to rig manufacturers, on demand. The **Vigil® Cuatro** can be used for four types of skydiving by pushing just one button. These user programmable modes are: «**PRO**», «**STUDENT**», «**TANDEM**» or «**XTREME**».

The **Vigil® Cuatro** also has a data recorder function (black box). The unit memorizes the last 16 minutes of freefall time (with a maximum of 16 graphs, whichever is reached first), total time in freefall and total number of jumps. This data can be viewed directly from the control unit's LCD display, or it can be downloaded to a PC through an infrared communication port.

The infrared reader and the associated software are available as an option (§ 9).

The Kevlar reinforced cables are especially developed for the **Vigil® Cuatro** and deliver a unique combination of strength and flexibility.

The gold plated contacts and the locking system with a specific locking clip to keep the connectors in place to ensure optimal connection reliability in all circumstances.

The control unit:

- is equipped with a 32 x 96 dots LCD display which allows interactive and clear communication with the parachutist.
- is protected by a special anti-scratch coating and a stainless steel protection cover.

The electromagnetic shielding protects the **Vigil® Cuatro** from electromagnetic interferences, such as those found in airports as in airplanes (see § 5.1).

3. Function

3.1. General Working Principle

The **Vigil® Cuatro** must only be turned on at ground level; it will recalibrate itself every 2 minutes progressively to the current ground elevation pressure. This is the “GROUND ZERO” reference.

Once your **Vigil® Cuatro** is on, at each take-off it will become armed once 1000 ft or 304 m above “ground zero” reference is reached, if a positive altitude correction is or not implemented.

When a negative altitude correction is set, the **Vigil® Cuatro** will become armed 1000 ft or 304 m above the preset negative altitude correction, so if the negative altitude correction is over 1000 ft or 304 m, the **Vigil® Cuatro** will become armed maximum 32 sec. after you have reached 90 ft or 27,5m above or under the “GROUND ZERO” reference (take off location).

8 **Vigil® Cuatro** will then stay armed until 2 minutes after it has come back to the “GROUND ZERO ZONE” reference (Between + 90ft and – 90ft or +27,5 m and -27,5 m).

To avoid an “airborne condition” (See page 25 for more detail) of your **Vigil® Cuatro** due to a difference in pressure that is equivalent to 90ft or more (positive or negative altitude) compared to the “ground zero” reference (pressure), you must ALWAYS manually shut down your **Vigil® Cuatro** at the end of the day or BEFORE leaving the drop-zone.



If the LCD pixels are inverted on the ground and prior to take off, your **Vigil® Cuatro** is Airborne and therefore not reading the correct Ground Zero reference. In this case, you must switch off and restart your **Vigil® Cuatro**, to get the correct Ground Zero reference..

In freefall, the **Vigil® Cuatro** continuously calculates the altitude.

Each mode «**PRO**», «**STUDENT**», «**TANDEM**» or «**XTREME**» has its own factory-set activation altitude and speed. Choice of mode can be done in the “**SETUP**” menu (see § 3.3). During your aircraft ascent, the **Vigil® Cuatro**'s red LED will briefly flash three times when it passes through its pre-set activation altitude.

The **Vigil® Cuatro** will automatically remain ON for 14 hours; it may of course be switched off manually before that time. The selected activation mode «**PRO**», «**STUDENT**», «**TANDEM**» or «**XTREME**» will remain visible on the LCD display until the **Vigil® Cuatro** is switched off or turns off automatically after 14 hours.

When the activation altitude (or lower) is reached by the jumper at a speed equal to or higher than the factory-set parameters, the cutter of the **Vigil® Cuatro** will instantly fire and cut the closing loop of your emergency parachute (in +/- 0,002 sec).

An “altitude correction” allows you to implement a positive or negative altitude difference between the departure and landing levels (from +6000 ft to -6000 ft or from +2000 m to -2000 m) in steps of 150 ft or 50 m.

Vigil® Cuatro takes this altitude correction into account to calculate the new activation altitude. This principle also allows you to modify the activation altitude permanently if the airport where you take off and the landing zone are at DIFFERENT altitudes or if there is a hillock near the drop zone.

3.2. Installation

The **Vigil® Cuatro** has been designed to be compatible with most sport harness/container systems on the market today. If a suitable installation kit for an electronic AAD is not yet installed by the rig manufacturer, a **Vigil® Cuatro** Installation Kit (pouch, controller window, and cutter retainer) can be supplied and installed in your container by the harness/container manufacturer, or by a proper certified authorized rigger.

It can be easily sewn into any harness/container system designed for an electronic AAD.

All reserve closing loops currently on the market that are similar to **Vigil® Dyneema** or the Spectra CSR style #9512-300 or the Cypres™ loop (Spectra Cord) are acceptable for use by the installation of the **Vigil®**.

The **Vigil® Cuatro's** cutter must be positioned and rigged as specified by the harness/ container manufacturer's instructions for electronic AAD's.

3.3. The Four Activation Modes

The **Vigil® Cuatro** has four activation modes that can be selected by the user.

The choice can be made in the "SETUP" menu (§ 3.5.4.). Each mode has its own factory settings.

The cutter activation data is defined by selecting an activation mode.

3.3.1. "PRO" Mode

The **Vigil® Cuatro** activates in "**PRO**" mode when it measures* 1100 ft or 335 m (average altitude** between 840 ft and 1100 ft or 256 m or 335 m, depending on body position) and below, until 150 ft or 46 m, if the freefall speed is equal or superior to 115 ft/sec. or 78 mph or 35 m/sec.

3.3.2. "STUDENT" Mode

The **Vigil® Cuatro** activates in "**STUDENT**" Mode when it measures* 1300 ft or 396 m (average altitude** between 1040 ft and 1300 ft or 315 m and 396 m, depending on body position) and below, until 150 ft or 46 m, if the freefall speed is equal or superior to 65 ft/sec or 45 mph or 20 m/sec.

3.3.3. "TANDEM" Mode

The **Vigil® Cuatro** activates in "**TANDEM**" Mode when it measures* 2300 ft or 701 meters (average altitude** between 2040 ft and 2300 ft or 622 m and 701 m, depending on body position) and below, until 150 ft or 46 m, if the freefall speed is equal or superior to 115 ft/sec or 78 mph or 35 m/sec.

3.3.4. "XTREME" Mode

The **Vigil® Cuatro** activates in "**XTREME**" Mode when it measures* 1100 ft or 335 meters (average altitude** between 840 ft and 1100 ft or 265 m and 335 m, depending on body position) and below, until 300 ft or 91 m, if the freefall speed is equal or superior to 141 ft/sec or 96 mph or 43 m/sec.



The "**Xtreme**" mode is specially developed for high performance canopy landings when the vertical speeds exceeds 115 ft/sec or 35 m/sec. ("PRO" mode). In "**Xtreme**" mode, the **Vigil® Cuatro** will not activate if the vertical speed does not exceed 141 ft/sec or 43 m/sec. It is important that in certain circumstances, such as low cut-away, it will most likely take longer time to reach the required vertical measured speed of 141 ft/sec or 43 m/sec of this "**Xtreme**" mode, compared to the "**Pro**" mode (115 ft/sec or 35 m/sec). This can make a difference. The **Vigil® Cuatro** in "**Xtreme**" mode will not activate below 300 ft or 100 m above the ground zero level or 300 ft or 100 m above a negative altitude correction, when set..



The cutter will activate instantaneously once the pre-determined activation mode parameters (altitude and falling speed) are reached. Please take this information into consideration when determining your main canopy deployment altitudes! Always allow enough time to have a fully open main canopy approximately 1000 ft or 300 m above activation altitude!..



If you are in freefall face to earth, your **Vigil® Cuatro** is in the depression zone (burble) and could measure up to ±260 ft or ±79 m higher than your actual altitude (§ 3.4)..



Before each jump it is essential to visually check your LCD screen to ensure its functionality, its activation mode ("**PRO**", "**STUDENT**", "**TANDEM**" or "**XTREME**") and its pre-selected parameters (altitude correction in feet or in meters) are correctly set..



WARNING: IF THE CLOSING LOOP IS NOT ROUTED THROUGH THE CUTTER, THE VIGIL® Cuatro WILL NOT CUT THE LOOP !

3.4. Information regarding the Activation Altitude

Please be aware that the **Vigil® Cuatro** functions are based on measured air pressure. This parameter permits the calculation of the exact altitude, in function of the registered air pressure, as well as the vertical speed related to a pressure variation in a certain period of time.


For information: **Vigil® Cuatro** is able to register pressure differences of 0,1 hPa which is equivalent to an altitude difference of only $\pm 2,6$ ft or 0,8 m!

Important note: The registered pressure by the sensor will vary, according to the body position of the skydiver (face to earth or back to earth) up to 10 hPa (=mbar) which is equivalent to ± 260 ft or ± 79 m!

Example: Let's consider two skydivers in free fall, at exactly the same altitude but one is falling back to earth and the second one is falling face to earth.

12

The influence of their falling position on their respective AAD reading is as follows:

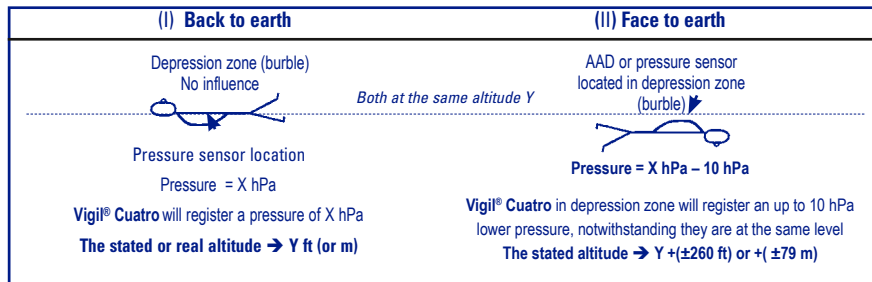

Conclusion:

If the **Vigil® Cuatro** is set in “**PRO**” mode, it will activate at an average altitude of 840 ft or 256 m above the ground, at a falling speed of 115 ft/sec or 78 mph or 35 m/sec or greater.

It is well accepted that this minimum activation level must be guaranteed whatever the position of the skydiver.

If the skydiver is falling in a back to earth position, the reading will reflect the correct pressure, since the sensor is not influenced by a depression (burble), but if the skydiver is falling face to earth, then the sensor located in the depression zone (burble) will read a pressure up to 10mbar lower, or an altitude ± 260 ft or ± 79 m above the real altitude, and will, in this case, activate later, or ± 260 ft or ± 79 m lower, i.e. at an actual altitude of 580 ft or 177 m above the ground level, which would be too low.

Therefore, a compensation of +260 ft or +79 m above the nominal activation altitude has been integrated into the software. For example in “**PRO**” mode, a programmed activation altitude of 1100 ft or 335 m has been set to ensure that, notwithstanding the skydiver's body position, activation will always be at a minimum altitude of 840 ft or 256 m (actual altitude) above the ground level.

13

Remarks:

- In a test chamber, the activation in “**PRO**” mode will be at 1100 ft (840 ft + 260 ft) or 335 m (256 m + 79 m) as there is no depression zone (burble).

3.5. Start Up and Shut Down Procedures



It is imperative that the **Vigil® Cuatro** be switched ON at the ground level of your take-off zone. (This becomes the "GROUND ZERO" reference altitude)..



If the **Vigil® Cuatro** discovers a variable air pressure during the start up procedure, it will not complete the start up procedure, and will show a alternating blinking "GROUND ZERO WARNING" on the controller LCD.

Your **Vigil® Cuatro** will calibrate itself according to the atmospheric pressure variations.

3.5.1 Start Up – Display

14 In its standard configuration, the **Vigil® Cuatro** is used with the orange push button situated at the right side of the display. The red LED is positioned in the upper corner and indicates the timing of the start up procedure. The green LED is situated in the bottom corner of the controller and confirms the end of the start up procedure.

► The **Vigil® Cuatro**'s display is reversible (see § 3.5.7.) «view» «MƏV»



Never switch on your Vigil® Cuatro in an aircraft !

3.5.2. Starting Up the Vigil® Cuatro

The **Vigil® Cuatro** becomes operational after pressing the orange push button four times. These short presses must be done immediately after each flash of the red LED. After the first push (hold for 1 or 2 seconds) the «Cuatro» message is shown. If no message appears, please repeat the previous operation. «Cuatro» is immediately followed by «Vigil» on the LCD.

Press the push button immediately after the red LED first flashes.

Press the push button immediately after the second flash of the red LED.

Press the push button immediately after the third flash of the red LED.

The **Vigil® Cuatro** will then automatically start its self-test sequence.

In short:

Action	Result
1. Push	«Cuatro» followed by «Vigil» appears + flash ⇔ (2) « VIGIL »
2. Push	Flash ⇔ (3) « VIGIL »
3. Push	Flash ⇔ (4) « VIGIL »
4. Push	Start of self tests « BAT OK »

The startup and shut down procedures listed in this manual have been established to reduce the risk of an unwanted start up or shut down sequence and to ensure that the Vigil® Cuatro cannot be turned on or off by accidentally pressing the push button.

3.5.3. Self Tests

The **Vigil® Cuatro** automatically goes through a complete test sequence each time it is switched on. It verifies that the battery pack, the cutter and the electronic circuits (main functions) are in proper working order..

The following messages are shown:

- **«Bat OK»** The battery pack is functioning properly.
- **«Cut OK»** The cutter resistance is tested O.K.
- **«Ctrl OK»** The electronic circuits are functioning properly.

If an error is detected the following messages may be shown:

- **«Bat Low»** Low Battery, the **Vigil® Cuatro** is still operational, but the dual battery pack must be replaced as soon as possible. * (see § 7.1)
- **«Bat Rpl»** The dual battery pack must be replaced, the **Vigil® Cuatro** will not switch on.* (see § 7.1)
- **«Cut Err»** Cutter resistance is outside tolerance, the **Vigil® Cuatro** will not switch on.
- **«Ctrl Err»** A discrepancy in one of the electronic circuits is observed, unit will not switch on.

If one of these messages is displayed (except for **«Bat Low»**), the startup procedure will end and the **Vigil® Cuatro** will switch itself off.

If the **«Bat Low»** message appears, the battery pack must be replaced as soon as possible (see § 7.1)

If the **«Bat Rpl»** message appears, the battery pack must be replaced prior to the next jump (see § 7.1)

If the **«Cut Err»** message appears, the cutter unit must be replaced prior to the next jump (see § 7.2).

A new cutter will be supplied free of charge if a completed "Life Saving Report" is posted and approved (see our website <http://www.vigil.aero/> on the download page).

- ▶ We recommend that **Vigil® Cuatro** parts (except the batteries) are replaced by a proper certified and authorized rigger or by a **Vigil®** approved expert.
The regulations in some countries require a certified rigger to do such replacements. The user may not have authorization to replace the cutter or controller unit. In such situations, you must adhere to your country's rules.



If the **«Ctrl Err»** message appears due to a failure in the electronic circuits, you must send the **Vigil® Cuatro** back to your dealer or to the factory for a complete checkup, before the next jump. (see § 7.4).
If the **«Ctrl Err»** message appears DO NOT try to restart the **Vigil® Cuatro** again.

This first test procedure is followed by 3 different menus: **«INFO»**, **«SETUP»**, and **«CONFIG»** (see § 3).

Recommendation: If the **Vigil® Cuatro** is not yet configured to your standard measurement units, go first to the **«CONFIG»** menu (see § 3.5.7.) to set the required units (U.S. or metric) before other settings.

3.5.4. «INFO» Menu (Information)

This menu allows you to display your **Vigil® Cuatro**'s reference parameters (version, date of manufacture and serial number), data of previous jumps, as well as temperature and atmospheric pressure.

To enter the **«INFO»** menu, press the push button as soon as the display shows **«INFO»** and the red light flashes.

These parameters are in clear language in function of the chosen units and as follows (*see § 3.5.7.):

<i>Display</i>	<i>Note: the number 8 is used for illustration (all segments used in a number).</i>
Ver :88.88	Software Version
Lcd :88.88	Controller version
#88888	Electronic Unit Serial Number
88/88.8	Production week and year (for example 26/06 = week 26 in 2006)
TJ :8888	Total Jumps (Total number of jumps with this unit)
TFF :88h 88m88s	Total Free Fall - Total free fall time with this unit in hours, followed by minutes and seconds
LFF :188s 888 km/h	Last Free Fall - Duration displayed in seconds and maximum speed of the last freefall displayed in mph or km/h
Saves 8	Number of activations on your Vigil® Cuatro
T :+88°C or +88°F	Temperature of Vigil® Cuatro main unit in °F or °C depending on the configuration
88.88inHg or 8888hPa	Atmospheric Pressure in inches of mercury (inHg) or hectopascal (hPa)

3.5.5. «SETUP» Menu (Parameters) Altitude correction

The «**SETUP**» menu enables you to implement a positive or negative altitude correction (in feet or meters) between the departure and arrival ground levels, as well as select the desired mode («**PRO**», «**STUDENT**», «**TANDEM**» or «**XTREME**») (see example page 20).

It is possible to enter the «**SETUP**» menu at the end of the self testing sequence.

To do this, press the push button as soon as the display shows «**SETUP**» and the red LED flashes.

It is possible to implement an altitude correction from +6000 ft to -6000 ft or from +2000 m to -2000 m.

To enter or modify a positive or negative altitude correction, press the push button while «**Alti Cor**» appears.

The arrow facing up corresponds to an increase of the altitude value and the arrow facing down to a decrease of the altitude value. The correction is made in increments of 150 ft or 50 m.

Press the push button until the desired positive or negative altitude correction is achieved.

For example: +100 m for higher landing zone compared to the take-off zone and -100 m. for a lower landing zone.

- 18 When the required altitude correction is displayed wait for a few moments and the mode selection («**PRO**», «**STUDENT**», «**TANDEM**» or «**XTREME**») will appear on screen.



If you land at a different altitude than your “**GROUND ZERO**”, please be aware that the original “**GROUND ZERO**” reference, will remain in the **Vigil® Cuatro**’s memory and will be applied to all following jumps, as long as your **Vigil® Cuatro** has not been switched off. Your **Vigil® Cuatro** **MUST** be reset after you have landed, and prior to your next jump at the other drop zone. By switching your **Vigil® Cuatro** off and back on again, the **Vigil® Cuatro** will reset itself.



Please remember that any implemented “**Alti Cor**” will remain in the **Vigil® Cuatro** memory and will only be cancelled if manually reconfigured in the “**SETUP**” menu.



When an altitude correction is applied, and the system of measurement is changed in the «**CONFIG**» (US to Metric or visaversa) the altitude correction will be divided or multiplied by 3. For example, 900 ft becomes 300 m or 150 m becomes 450 ft. Be aware that there is a deviation ! This is due to the fixed increments of 150 ft or 50 m.

3.5.6. Using a positive altitude correction to raise the activation altitude

As stated on § 3.3, in «**PRO**» settings a **Vigil® Cuatro** activates at a measured altitude of 1100.ft or 335 m (real activation altitude will be between 840 & 1100 ft or 256 m & 335 m, depending on body position).

To increase safety margins, an altitude correction can be performed (see § 3.5.5.)









Some important points to remember:

- Once an altitude correction is applied, this will stay in the **Vigil® Cuatro**’s memory, until you manually remove it in the «**SETUP**» menu.
- When you raise the activation altitude, always allow enough time to have a fully open main canopy approximately 1000ft above your new activation altitude. During a slow opening, it may take longer until you have a fully open main canopy, which may bring you closer to the activation altitude you choose.
- A **Vigil® Cuatro** will activate at the measured altitude it is set in. Please read page 10, 11, 12 and 13 carefully to understand this !!
- When a positive altitude correction is implemented, the **Vigil® Cuatro** can activate at the preset altitude plus the added altitude correction till 150 ft or 50 m (300 ft or 100 m in «**Xtreme**» setting) above the “start ground zero reference”. This is the same altitude as if no altitude correction is applied.
- This means on a positive altitude correction, you will increase the activation window. The “stop activation” altitude of 150 ft or 50 m (300 ft or 100 m in «**Xtreme**» setting) above the “original start ground zero reference” does NOT change!
- When a negative altitude correction is implemented, the **Vigil® Cuatro** can activate at the preset altitude minus the added altitude correction till 150 ft or 50 m (300 ft or 100 m in «**Xtreme**» setting) above the set negative altitude correction (the “new landing zone”).



It is each’s individual’s responsibility to make sure he or she, has a fully open main canopy well above the activation altitude. We recommend allowing approximately 1000 ft or 304 m between a fully open main canopy and the activation altitude. This should allow enough time to deal with emergency procedures (if necessary) and prevent a possible two-canopy out situation.

The possibility to raise the activation altitude, and keep it until manually changed in the «**SETUP**» menu, has always been in all **Vigil® AAD**’s produced since 2003..

 <p>Vigil® Cuatro in «Pro» settings without altitude correction</p>	 <p>Vigil® Cuatro in «Pro» settings with <u>positive</u> altitude correction of 100 meter</p>
 <p>Vigil® Cuatro in «Student» settings without altitude correction</p>	 <p>Vigil® Cuatro in «Student» settings with <u>negative</u> altitude correction of 600 feet</p>
 <p>Vigil® Cuatro in «Tandem» settings without altitude correction</p>	 <p>Vigil® Cuatro in «Tandem» settings with <u>negative</u> altitude correction of 300 meter</p>
 <p>Vigil® Cuatro in «Xtreme» settings without altitude correction</p>	 <p>Vigil® Cuatro in «Xtreme» settings with <u>positive</u> altitude correction of 1200 feet</p>

Certain special models may be equipped with custom-built or experimental software. In such cases, a specific identification logo on the cover is used, and a specific manual will be issued. The information supplied for those units could be different from that supplied for the **Vigil® Cuatro** units.



Vigil Cuatro logo



Vigil II and Vigil 2+ logo



Vigil Xtreme 46 logo

3.5.7. «CONFIG» Menu (Configuration)

This configuration menu allows you to choose the type of measurement units you wish to use, reverse the display characters and adjust the contrast of the display.

To enter into the configuration menu, press the push button as soon as the display indicates «**CONFIG**» and the red LED flashes.

Initially, the display indicates «**Feet**» or «**Meters**», depending on the chosen configuration. To change the measurement unit, press the push button.

You can choose «**U.S.**» or «**Metric**» by pressing the push button (°Fahrenheit, mph, inches of mercury or °Celsius, km/h, hectoPascal).

Press «**View**» to choose to view the display in its normal configuration or flipped 180° «**View**» «**VIEW**».

Once the «**CONFIG**» menu is completed, the **Vigil® Cuatro** is operational and will keep in memory the chosen configuration.

For example:

Action	Display
1. Wait	«CONFIG» displayed
2. Push	Choose between «Feet» or «Meters»
3. Push	Choose between «U.S. » or «Metric» (*Fahrenheit, mph, inches of mercury or °Celsius, km/h, hectoPascal)
4. Push	Choose between normal or reversed display «View» or «VIEW»

3.5.8. Choice confirmation

22 The green LED flashes five times and the message «😊Enjoy» is displayed for a few seconds to confirm the Vigil® Cuatro is ready for use.

- ▶ Remark: While the message «😊Enjoy» is displayed, by pushing the button you can go back to the three menu's (INFO, SETUP or CONFIG) for a possible verification or modification.

If no altitude correction is entered, the chosen («PRO», «STUDENT», «TANDEM» or «XTREME») mode remains displayed. If an altitude correction was entered, the chosen mode will be displayed as "P" (for PRO), "S" (for STUDENT), "T" (for TANDEM) or "X" (for XTREME) followed by a «+» or «-» sign preceding the value of the implemented altitude correction (see example page 20). The value will be shown in feet (ft) or meters (m).

- ▶ **BEFORE EACH JUMP, check the unit carefully for any implemented mode or altitude correction (in ft. or m).**

After switch on, the Vigil® Cuatro stays on for a period of 14 hours, and will then switch off automatically (see page 25 for more detail).

At the next switch-on, Vigil® Cuatro will remember and keep all of the previous settings used with the exception of the ground zero reference. The ground zero reference is recalibrated at each switch on.


- ▶ The Vigil® Cuatro is now ready for use and is in a stand-by status. While in stand-by status, the unit re-calibrates itself every 2 minutes. After take-off the Vigil® Cuatro will become armed once 1000.ft or 304 m above "ground zero" reference is reached, if a positive altitude correction is implemented or not. When a negative altitude correction is implemented, the Vigil® Cuatro will become armed 1000 ft above the preset negative altitude correction (see § 3.1.)
- ▶ After take-off (in max 32 sec. above 90 ft or 27,5 m) the Vigil® Cuatro will go in to fast measuring mode (Airborne status). You can notice this when the LCD pixels invert. (see image on § 5.6)
- ▶ For 2 minutes after each landing, your jump information will be displayed (Last FF time & speed). LCD pixels remain inverted. This same jump informations are accessible at any time (displayed for 30 sec.) by pushing the LCD button once.

3.5.9. Shut down. (The shut down procedure is similar to the start up procedure)

A quick press of the push button after each LED flash (4 times) will shut down the Vigil® Cuatro. On the first press the «☒Sys OFF» message is displayed. Press the button a second and third time; do this as soon as the red LED flashes. Press the button as soon as the red LED flashes a fourth and last time. The display will show «Goodbye» followed by «Vigil» for a few seconds. Finally, the green LED flashes very briefly and then the Vigil® Cuatro shuts down.

For Example:	Action	Result
	1. Push	Short flash ⇔ (2) «☒Sys OFF»
	2. Push	Short flash ⇔ (3) «☒Sys OFF»
	3. Push	Short flash ⇔ (4) «☒Sys OFF»
	4. Push	«Goodbye» followed by «Vigil» are displayed before the AAD shuts down.

4. Flight restriction for the pilot - Airborne

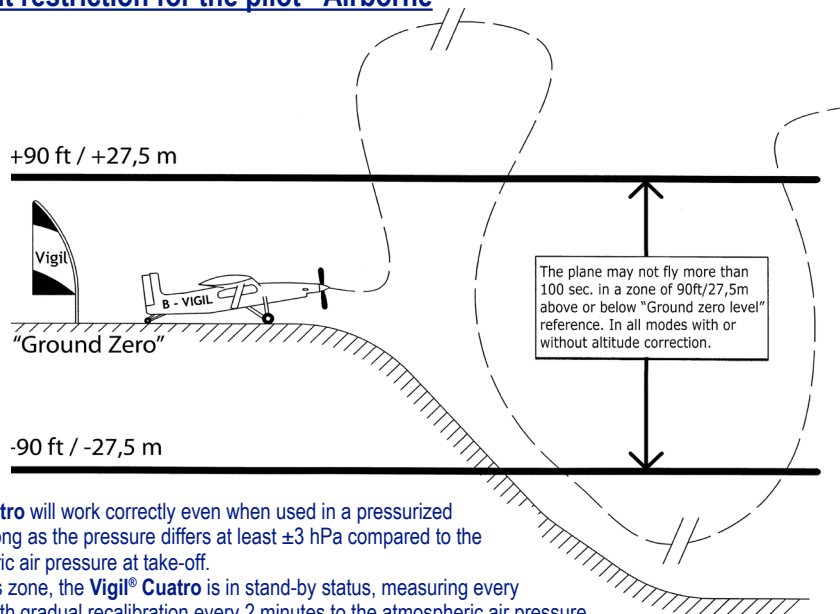

Vigil® Cuatro will work correctly even when used in a pressurized cabin as long as the pressure differs at least ± 3 hPa compared to the atmospheric air pressure at take-off.

-Inside this zone, the **Vigil® Cuatro** is in stand-by status, measuring every 32 sec. With gradual recalibration every 2 minutes to the atmospheric air pressure.

Outside this zone, **Vigil® Cuatro** will go in fast measuring status, measuring 8 times per sec (airborn status), with a fixed ground zero reference in a maximum delay of 32 sec.

- ▶ The **Vigil® Cuatro** will not activate below 150 ft or 50 m above "Ground zero" reference in «**PRO**», «**STUDENT**» or «**TANDEM**» mode when no or a positive altitude correction is implemented. When negative altitude correction is implemented, **Vigil® Cuatro** will not activate below 150 ft or 50 m above the preset negative altitude correction in «**PRO**», «**STUDENT**» or «**TANDEM**» mode. The **Vigil® Cuatro** will not activate below 300 ft or 100 m above "Ground zero" reference in «**XTREME**» mode when no or a positive altitude correction is implemented. When negative altitude correction is implemented, **Vigil® Cuatro** will not activate below 300 ft or 100 m above the preset negative altitude correction in «**XTREME**» mode.
- ▶ To avoid unexpected cutter activation, you must switch OFF your **Vigil® Cuatro** before travelling in a closed vehicle (car, bus, train ...) or before placing the **Vigil® Cuatro** in a closed traveling bag, due to possible air pressure variation. However, there is no problem travelling in an open vehicle at the drop zone altitude.
- ▶ Prior to opening the door of an aircraft in flight while it is in the activation zone (below 1640 ft or 500 m), it should be determined whether or not there are any Vigils on board which are set to «**STUDENT**» Mode. Certain aircraft configurations can create a pressure spike which can activate a Vigil® Cuatro AAD, when it is set to «**STUDENT**» Mode and the aircraft is in the activation zone.
- ▶ As long as your **Vigil® Cuatro** is not measuring the switch on pressure or its "Ground zero" reference (+/-90 ft or 27,5 m) it will stay airborne, (measuring 8 times/sec.)
- ▶ You must **ALWAYS** switch off your **Vigil® Cuatro** before moving to a different location and switch on at the new location to re-set your **Vigil® Cuatro** the new "ground zero" or re-calibrate at the pressure of that area.
- ▶ Be aware that any implemented altitude correction will not affect the original "Ground zero" reference altitude. It will adjust the activation altitude in function of the implemented altitude correction parameters. After such a jump, you need to switch your **Vigil® Cuatro** off and back on again to implement the new "Ground zero" reference altitude and manually remove the previous altitude correction. (If no longer required).
- ▶ If descending in an aircraft with an armed **Vigil® Cuatro**, the pilot must be advised of the status of your **Vigil® Cuatro** to limit his descent rate according to the mode less than 65 ft/sec or 3900 ft per minute or 20 m/sec for «**STUDENT**» and less than 115 ft/sec or 6900 ft per minute or 35 m/sec for «**PRO**» or «**TANDEM**» and in the activation zone (this is especially important for **Vigil® Cuatro** programmed in «**STUDENT**» mode). In these circumstances we recommend that the **Vigil® Cuatro** be switched off, if possible.

4.1. Recommendations

- ▶ To get the correct **GROUND ZERO REFERENCE**, you must only switch the **Vigil® Cuatro** ON once you arrive at the take-off zone. Afterwards, enter any altitude correction, if needed.
- ▶ When the elevation of your landing zone differs by more than 90 ft (27,5 m) compared to your initial take-off zone and this landing zone becomes your new take-off zone, it is necessary to switch your **Vigil® Cuatro** off and back on again so that it can re-calibrate itself.
- ▶ Before each jump always verify carefully the correct settings on the display.
- ▶ Manually shut down your **Vigil® Cuatro** after the last jump of the day.
- ▶ The **Vigil® Cuatro** will shut down automatically 14 hours after its start-up.
- ▶ To avoid undesired **Vigil® Cuatro** cutter activation, if you enter a plane with a pressurized cabin, please notify the pilot that he is not allowed to do any pressurization tests to pressures equivalent to the **Vigil® Cuatro** activation altitude (below 1640 ft or 500 m in “**STUDENT**”, “**PRO**” or “**XTREME**” mode, or below 2300 ft or 701 m in “**TANDEM**” mode), with a pressure variation equivalent to, or in excess of, a vertical speed greater than 65 ft/sec. (45 mph or 20 m/sec).
- ▶ It is impossible to enter a negative altitude correction of more than 1500 ft or 500 m below mean sea level (equivalent to >1090 mbar). In this case the controller will indicate «**Invalid**» and the **Vigil® Cuatro** unit will not switch on.

5. Vigil® Cuatro Components

The **Vigil® Cuatro's** Dual Battery Pack (§ 5.2.), the Pulses Plus Element (§ 5.3.) and the Electronic Unit (§ 5.4.) are located in a durable metal alloy Main Box (§ 5.1).

Two flexible electric cables, reinforced by 2 Kevlar cords, ensure a reliable junction between the main unit (Main Box) and the Cutter Unit (§ 5.5) as well as between the Main Unit and the Control Unit (§ 5.6).

5.1. Main Box

The **Vigil® Cuatro** electromagnetic shield was thoroughly tested to ensure that it would function as intended when exposed to electromagnetic interference (up to 100 volt/m).

Such interference can be found in airports as in aircrafts...

The special shielding foil protects against electromagnetic interference waves produced by:

- Radio communications
- Mobile phones
- Transponders
- Radar

Two connectors and three integrated stainless steel filters are fixed in the Main-Box.

The stainless steel filter ensures protection against pollution, such as the intrusion of dust, and provides a instant transfer of outside air pressure to the pressure sensor (keep it clean and dry).



NEVER OPEN THE MAIN BOX OF THE VIGIL® Cuatro !!

Opening the main-box of Vigil® Cuatro voids all warranties !!.

5.2. Dual Battery Pack - NATO Stock Number (NSN) 6130-13-119-7106

The battery pack is composed of 2 metal lithium AA cells in the lower half of the case. It is not subject to any memory effect and is extremely long lasting. The battery pack works at a temperature range from -13°F to +158°F or from -25°C to +70°C. The use of low consumption components in conjunction with a sophisticated power management program has significantly improved the battery's life span.

The battery warranty is guaranteed to be a minimum of 5 years or 2000 jumps.

The battery lifespan is maximum 12 years, starting of the Date of Manufacturing (DOM).

The battery in new **Vigil®** units which are installed starting October 2018 must be replaced (mandatory) between 8 and at latest 12 years after “**DOM Vigil**”.

Type	Vigil Cuatro
Serial Nr	#88888
DOM Vigil	MAY 2021
Bat Rpl before	MAY 2033
Firmware	07.03

- ▶ To replace the battery, the complete **Vigil® II** needs to be send back to A.A.D. nv/sa Belgium, or Vigil America. (See § 7.4)

5.3. Pulses Plus Element

28

The “Pulses Plus” technology supplies the high peak current necessary for the cutter to activate and cut the loop in +/- 2 milliseconds. This element has an operational lifespan of 20 years and under normal circumstances it will never need replacement.

5.4. Electronic Unit

The full automated assembly of surface-mounted electronic components (SMD, Surface Mounted Devices) is manufactured to the highest standards. The SMD components assemblies are assembled with permanent electronic and optical production control equipment in order to ensure the highest level of quality and reliability, equivalent to military standards. The electronic unit also works as a data recorder. It memorizes parameters (see § 3.5.6) such as the total number of jumps, the duration of the last freefall jump and the total freefall time. This data can be viewed directly on the control unit’s LCD display.

The **Vigil® Cuatro** memory contains the graphs of the last 16 minutes of freefall and partial canopy ride, that can be downloaded to a PC using the **Vigil® Cuatro** communication port. (see § 9.)

5.5 Cutter Unit - NATO STOCK NUMBER (NSN) 1377-13-122-0198

The Cutter Unit is patented and designed especially for the **Vigil® Cuatro** and has a life expectancy of 20 years. The cutter severs the reserve loop using a pyrotechnical cutting action with a circular knife. In addition, due to a higher temperature, the knife will also melt the loop for a clean separation.

The cutter is completely enclosed to avoid any possible damage to the parachute.

If the **Vigil® Cuatro** is activated for a lifesaving event, a new cutter will be supplied free of charge, only upon presentation of a complete Life Saving Report, approved by **Vigil®**. This document can be completed online @ www.vigil.aero/life-saving-report or downloaded from the **Vigil®** website www.vigil.aero/wp-content/uploads/life_saving_report.pdf



- ▶ The cutter is field (rigger) replaceable. (see § 7.2).
- ▶ Some countries’ regulations require a certified rigger to do such replacements. In this situation you must adhere to your country’s rules.
- ▶ A Dual Cutter can be supplied for a reserve parachute placed in a 2 pin container.

29

5.6. Control Unit - NATO STOCK NUMBER (NSN) 6110-13-122-0294

The control unit is composed of a reversible display, a red LED that sets the timing of the start up and shut down procedure, a green LED that confirms the end of the start up procedure and an orange push button situated in the standard configuration, on the right of the display.

The 32 x 96 dots display on the control unit allows clear alphanumerical communication with the parachutist. It is protected by a stainless steel cover.


The red LED is also used as transmitter for the infrared communications port. (see page 38 § 9).

Stand-by status

Normal display of the control unit on the ground (not airborne)

Airborne Status

Inverted display of the control unit (airborne in fast measuring mode)

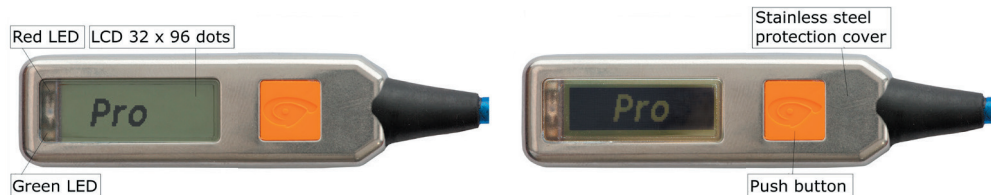

6. Waterproof – IP 68

The Vigil® Cuatro has been designed to be dust tight and to resist water immersion of up to 6 ft or 1,8 m depth for a maximum of 24 HOURS (IP 68).

AFTER SUCH IMMERSION OR CONTACT WITH WATER, ALWAYS FIRST SWITCH OFF THE VIGIL® CUATRO.

IF THE VIGIL® CUATRO HAS BEEN IN CONTACT WITH SALT WATER, FIRST SWITCH OFF THE VIGIL® CUATRO, BEFORE RINSING IT WITH CLEAR WATER.

The Vigil® Cuatro built-in stainless steel filters does not need to be replaced.

The 3 filters need to be dried with a water absorbent cloth, household paper or a cotton swab.

Leave the device for 12 hours in an environment with a ambient temperature of +65°F or +18°C before the installation in a rig.

IT IS MANDATORY TO SEND THE Vigil® Cuatro BACK TO THE FACTORY FOR AN INSPECTION OF THE UNIT BEFORE THE NEXT JUMP IN THE FOLLOWING CASES:

- IF THE Vigil® Cuatro HAS BEEN IMMERSSED IN SALT OR CLEAR WATER DEEPER THAN 6 ft or 1,8 m.
- IF THE Vigil® Cuatro HAS BEEN IMMERSSED FOR MORE THAN 24 HOURS IN WATER.



Do not open your Vigil® Cuatro's main box case.

7. Replacement of Parts of the Vigil® Cuatro

7.1. Replacing the Battery Pack

Vigil® Cuatro Dual Battery Pack, can only be changed by A.A.D nv/sa Belgium or Vigil America . Therefore the **Vigil® Cuatro** has to be returned for a battery change. (See § 7.4)

7.2. Replacing the Cutter or Control Unit

Every (dis)assembling operation must be done with the **Vigil® Cuatro SWITCHED OFF.** (§ 3.5.9.)

How to be sure the **Vigil® Cuatro** is switched off.

1. Press on the push button only one single time to display "Cuatro" on screen.
2. Wait until a blank screen appears again (proves that the unit is switched off).
3. Perform procedure as shown and described on page 33.
4. Perform a new start up procedure for final check. (see § 3.5.2.)
5. Fill in the Service Card (see § 7.3.)

Replacing the Cutter Unit after activation, or the Control Unit if necessary, is a simple and fast process which is highly recommended to be done by your rigger or through a **Vigil®** dealer.



IT IS MANDATORY TO CORRECTLY PLACE THE CONNECTORS LOCKING CLIP (CLC) !!

If the CLC is missing, damaged, or if not correctly positioned, DO NOT JUMP with this **Vigil® Cuatro** !! You can order a new Free CLC at your dealer, A.A.D. nv/sa Belgium or Vigil America.



FIRST ACTION IS TO SWITCH OFF THE VIGIL® CUATRO




I. Unscrew Connectors Locking Clip (CLC)



II. Remove Connectors Locking Clip (CLC)




III. Manually unscrew connector

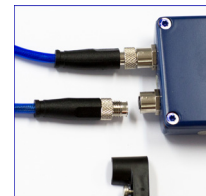


IV. Unplug connector (for example cutter)



V. Reconnect and manually tighten the new spare unit (Cutter or Control unit)

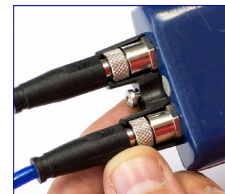

VI. Place Connectors Locking Clip (CLC), and check if CLC locks both connectors

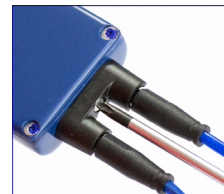

VII. After CLC is well positioned, secure with original screw.



VIII. Check if CLC is closely attached to Main Box (no space between both objects)

7.3 Spare Part Card

Every replacement part comes with a Spare Part Card (Vigil® AAD Service Card) with a silver hologram with red number and a date of manufacture (DOM) for the cutters, the software version for the control units. Others can be for example a software upgrade. The card is identified with the same hologram sticker.

When the replacement of a subpart has been done, it is mandatory to proceed as follows:

1. Fill out the Spare Part Card.
2. Send a copy of the Spare Part Card to A.A.D. nv/sa. by fax +32 2 7360627 or via e-mail to service@vigil.aero
3. Hand it to the owner of the Vigil®. Make sure that the owner keeps the original Spare Part Card with the original Test Certificate card and the documents of the rig.


34 This procedure is important for our After Sales Service, as it allows us to update our files and to guarantee the replacement part with a 2 year warranty.

7.4 RMA (return merchandise authorization)

If your Vigil® Cuatro needs to be returned for repair, firmware upgrade, battery replace or other reasons, please follow the instructions and complete the online RMA form @ www.vigil.aero/rma.

Vigil® AAD Spare Part Card

This spare part have been tested in accordance with Advanced Aerospace Designs manufacturing specifications valid on the Date Of Manufacture (D.O.M.). To validate your customer's warranty, please fill and and send via E-mail to service@vigil.aero

<p>Vigil model: <u>VIGIL 2+</u></p> <p><input checked="" type="checkbox"/> Cutter D.O.M.: <u>08/18</u></p> <p><input type="checkbox"/> Controller D.O.M.: _____</p> <p><input type="checkbox"/> Other: _____</p> <p>Testing Location: Tongeren, Belgium</p> <p>Tested By: <small>Quality Control Approved</small> <i>[Signature]</i></p>	<p>QC Nr: <u>23008</u> </p> <p>Mounted on the Unit: _____</p> <p># _____ / QC Nr: _____</p> <p>Jump Counter: _____</p> <p>By: _____</p> <p>Rigger Nr: _____</p> <p>Date: _____</p> <p>Signature: _____</p>
---	---

8. Technical specifications

8.1. Glossary

Electromagnetic shielding: A special metal shield that protects the electronic circuits from electromagnetic waves to avoid malfunctions of the device by electromagnetic interference (from radars, cellular phones ...).

Cutter Unit: A pyrotechnical cutting system with a cylindrical knife that severs the loop in 2 places.

Infrared Port: Transmitter/receiver of infrared signals that allows a bidirectional exchange of data between two devices.

Kevlar: Non elastic carbon fiber used to reinforce the cables. It prevents direct traction on the electrical connections, and it reinforces mechanically the junction cables of the Control Unit and the Cutter unit.

LCD: Liquid Crystal Display. The LCD is used to visually convey information from the Control Unit to the user.

LED: Light Emitting Diode; A LED is used to flash during the start up and shut down procedures of the device.

SMD: Surface Mount Device. Small electronic components manufactured to be of reduced size and low power consumption. Such technology allows the electronic circuit to be mounted automatically, which gives very reliable and compact electronic systems.

Connectors Locking Clip (CLC): A plastic molded clip that prevents the Cutter or Control Unit connector from unscrewing unintentionally or accidentally from the main-box.

8.2. Dimensions

- Main Box: Size: 4 x 2 x 0.8 inch (102 mm x 51 mm x 20 mm)
Volume: 8 inch³ (130 cm³) - Weight: 14 ounce (400 g)
- Cutter size: 2 inch x Ø 0.35 inch (55 mm x Ø 9 mm)
- Controller size: 2.54 x 0.7 x 0.33 inch (64,5 x 19 x 8,5 mm)
- Cable length: Cutter unit: Standard ± 1.97 ft (± 600 mm)
Control unit: Standard ± 2.95 ft (± 900 mm)

8.3. Operating description

- Altitude correction: from +6000 ft (+2000 m) up to -6000 ft (-2000 m)
- Operating range: -1800 ft (-600 m) up to more than 100.000 ft (30.000 m)
- Active Airborne range: -1800ft(-600m) up to + 30.000ft (9200m)
- Operation: **Vigil® Cuatro** see § 3
- Working temperature: from -13°F (-25°C) to 158°F (+70°C)
- Life time: Maximum 20 years life expectancy
- Maintenance: No scheduled maintenance required. In function of self tests messages during start-up
- Waterproof: IP 68 - Dust tight and water immersion up to 6 ft or 1,8 m for a maximum of 24 hours
- Stand-by: 14 hours
- Power Pack: 3.6V dual lithium Vigil® AA battery Warranty is minimum 2.000 jumps or 5 years
The **Vigil® Cuatro** battery Life Span is maximum 12 years from **Vigil®** DOM.

8.4. Units and conversion factors

- Length: ... Ft x 0,3048 = ...m or ...m x 3, 281 = ... ft
- Pressure: ... inHg x 33,86 = ... mbar/hPa or ... mbar/ hPa x 0,02953 = ... inHg
- Speed: ... mph x 1,6093 = ... km/h or ... km/h x 0,6214 = ... mph
- Temperature: (... C° x 9/5) + 32 = ... F° or (... F° - 32) x 5/9 = ... C°

9. Communication Port – IR Download Box (optional)

NATO Stock Number (NSN) 7025-13-119-7111

The **Vigil® Cuatro** Control Unit is equipped with an infrared communication port that allows the user to download the freefall data recorded from the previous jumps.

An I.R. Download Box and the associated management software is available as an option (see your dealer for more information). All of the parameters of the last 16 minutes of freefall and partial canopy ride are recorded (maximum 16 jumps), as well as the total number of jumps and other information.
(Altitude & speed in function of time)



38

Reminder:

- The **Vigil® Cuatro** is a safety device and is NOT engineered to be used as a data logger.
 - AAD nv/sa operates a policy of continuous development. Therefore, we reserve the right to make modifications and/or improvements to any of the products described in this manual, without notice.
 - All trademarks mentioned in this manual are the property of their respective owners.
- The VIGIL® Cuatro is delivered in a custom-built case.
After installation of the device the in rig container, this case can easily be used to carry some of your accessories, such as glasses, audible altimeter, altimeter, camera,...

10. SERVICE LIFE LIMIT OF VIGIL® Cuatro UNITS

The **Vigil® Cuatro** has been designed for maximum 20 years of use. It will do a complete check of each operating parameter each time it is switched on. If a parameter is out of tolerance, this will be indicated on the Control Unit display screen, and the unit will not switch on.

11. DISCLAIMER AND LIMITED WARRANTY

THE USER MUST READ, UNDERSTAND, AND AGREE TO THE TERMS OF THIS DISCLAIMER BEFORE USING THE VIGIL® Cuatro

AAD nv/sa INTENSIVELY TESTS EACH VIGIL® CUATRO TO ASSURE ITS RELIABILITY. EACH VIGIL® CUATRO HAS PASSED VARIOUS DOCUMENTED TECHNICAL INSPECTIONS, CALIBRATION TESTS, QUALITY CONTROL INSPECTIONS AND A FINAL FUNCTIONAL TEST (7 SIMULATED JUMPS IN A TEST CHAMBER) BEFORE SHIPMENT. THESE ARE ALL DOCUMENTED AND AVAILABLE TO CUSTOMERS. HOWEVER, THE RISK OF ELECTRONIC, MECHANICAL OR EXTERNAL FACTORS CAUSING A MALFUNCTION OR FAILURE CANNOT BE TOTALLY EXCLUDED.

BUYER UNDERSTANDS THAT BECAUSE OF THE UNAVOIDABLE DANGER ASSOCIATED WITH THE USE OF A PARACHUTE SYSTEM, SKYDIVING AND THE USE OF A VIGIL® CUATRO, THE MANUFACTURER MAKES NO WARRANTY WHATSOEVER, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, EXCEPT THAT THE MANUFACTURER WILL REPLACE OR REWORK DEFECTIVE PARTS FREE OF CHARGE WITHIN TWO YEARS FROM THE DATE OF PURCHASE. OTHER THAN THE FOREGOING, THE VIGIL® CUATRO IS SOLD WITH ALL FAULTS AND WITHOUT ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR USE..

(continue on page 40)

39

11. DISCLAIMER AND LIMITED WARRANTY (continuation of page 39)

THE MANUFACTURER DISCLAIMS ANY LIABILITY UNDER THE LAW, IN TORT OR OTHERWISE, FOR DAMAGES, DIRECT OR CONSEQUENTIAL, INCLUDING BUT NOT LIMITED TO DAMAGES FOR PERSONAL INJURIES, WRONGFUL DEATH, PROPERTY DAMAGE AND LOSS OF USE OF EQUIPMENT, RESULTING FROM ANY MALFUNCTION, OR FROM ANY DEFECT IN DESIGN, MATERIAL, WORKMANSHIP OR MANUFACTURING, WHETHER CAUSED BY NEGLIGENCE ON THE PART OF THE MANUFACTURER, OR ANY MANUFACTURER OF ANY PART, ACCESSORY, COMPONENT, OR APPLIANCE MADE A PART OR APPURTENANT TO THE VIGIL® CUATRO. BUYER, BY USE OF THE VIGIL® CUATRO, AND/OR ALLOWING IT TO BE USED BY OTHERS, WAIVES ANY LIABILITY ON THE PART OF THE MANUFACTURER FOR PERSONAL INJURIES, WRONGFUL DEATH, LOSS OF CONSORTIUM, PROPERTY DAMAGE AND LOSS OF USE OF EQUIPMENT. THE WARRANTIES SET FORTH ABOVE AND THE OBLIGATIONS AND LIABILITIES OF THE MANUFACTURER THEREUNDER, ARE EXPRESSLY IN LIEU OF AND BUYER HEREBY WAIVES AND RELEASES, ANY AND ALL OTHER WARRANTIES, AGREEMENTS, GUARANTEES, CONDITIONS, DUTIES, OBLIGATIONS, REMEDIES OR LIABILITIES, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION GUARANTEES, CONDITIONS, DUTIES, OBLIGATIONS, REMEDIES OR LIABILITIES, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, AND IMPLIED WARRANTIES ARISING FROM COURSE OF PERFORMANCE, DEALING, USAGE OR TRADE, WITH RESPECT TO THE MANUFACTURER'S PERFORMANCE HEREUNDER, AND BUYER AGREES THAT THE MANUFACTURER SHALL NOT BE LIABLE FOR ANY DAMAGE OR LOSS (INCLUDING, BUT NOT LIMITED TO, CONSEQUENTIAL DAMAGES) SUFFERED BY BUYER, DIRECTLY OR INDIRECTLY BECAUSE OF ANY DEFECT IN THE

(continue next page 41)

11. DISCLAIMER AND LIMITED WARRANTY (continuation of page 40)

MANUFACTURER'S PERFORMANCE HEREUNDER. NO AGREEMENT OR UNDERSTANDING VARYING, ALTERING OR EXTENDING THE MANUFACTURER'S LIABILITY HEREUNDER SHALL BE BINDING ON THE MANUFACTURER UNLESS IN WRITING AND SIGNED BY THE MANUFACTURER'S AND THE BUYER'S DULY AUTHORIZED OFFICER OR REPRESENTATIVE.

IMPORTANT NOTE: THERE IS A QUALITY CONTROL NUMBER HOLOGRAM (4 ALPHANUMERIC DIGITS) ON EACH OF THE UNITS OF A VIGIL® CUATRO (PYROTECHNIC CUTTER, PULSES PLUS ELEMENT, CONTROL UNIT, AND MAIN BOX).

REMOVAL OF ANY Q.C. HOLOGRAM STICKER, OR THE BLUE SEALING PAINT, (EXCEPT BY THE MANUFACTURER) VOIDS THE WARRANTY.



NEVER JUMP WITH A BLANK SCREEN!!!



Please carefully read and ensure that you fully understand this user's manual before any use of the Vigil® Cuatro.

12. Grafset/Road Map (Parameter sequence flow chart)

